

SETUP
CHANNEL GRAPH
GRAPH
N EXITS GRAPHICS MODE.

Fig. 8

>A/C RELAY
SCROLL TO SELECT PARAMETER.
Y SELECTS, N EXITS GRAPHICS MODE.

Fig. 9

Fig. 10

A/C RELAY
>GREATER THAN
SCROLL TO SELECT TRIGGER THRESHOLD.
Y SELECTS, N EXITS GRAPHICS MODE.

<u> </u>	-		
			N EXITS GRAPHICS MODE.
A/C RELAY	EQUAL TO	NO<	Y SELECTS,

Fig. 12


Y SELECTS, N EXITS GRAPHICS MODE. >0123456789.- DELETE DONE BACK BATTERY (V) LESS THAN


BACK Y SELECTS, N EXITS GRAPHICS MODE. >TRIGGER @ LEFT CENTER RIGHT 11.75 BATTERY (V) LESS THAN

Fig. 13

Fig. 14

>ACCEPT
BATTERY(V)
LESS THAN 11.75 @ CENTER
Y SELECTS, N EXITS GRAPHICS MODE.

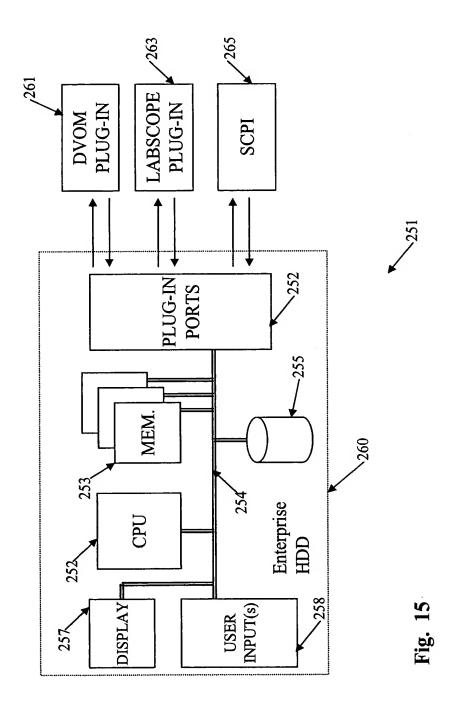

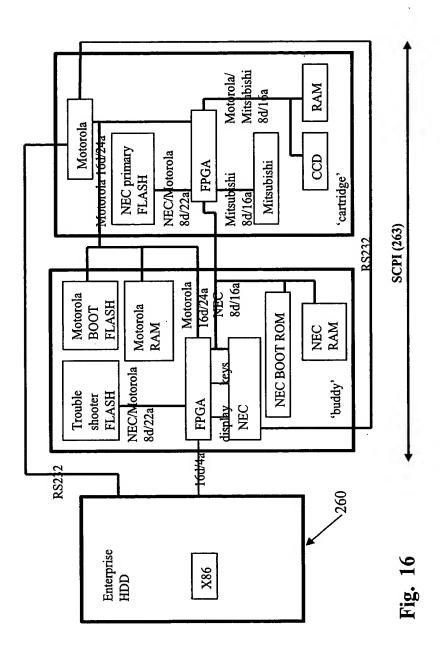

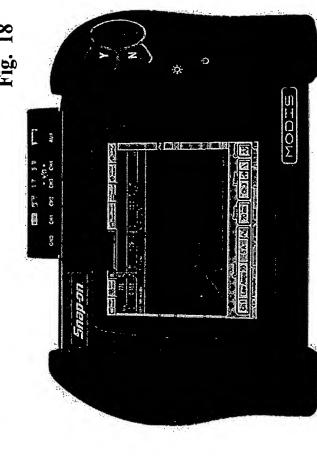


Fig. 18

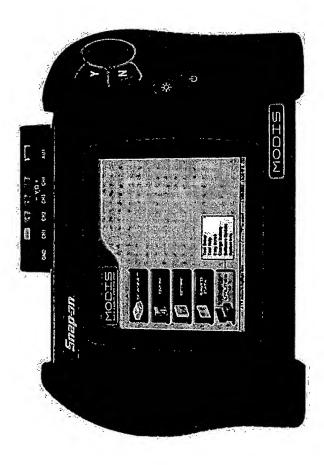


Fig. 17




Fig. 19

